



ASSEMBLING THE MOSQUITO NET


- 1 Connect the mosquito screen elements by placing the profiles on the corner joints.

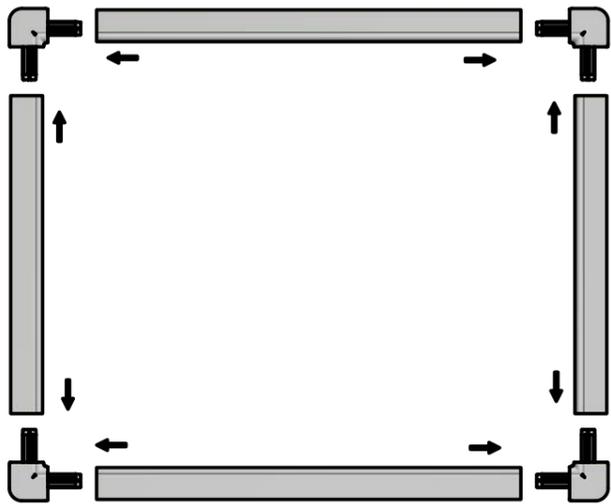


- 2 Next, place the mesh over the assembled frame and secure it with a gasket by pressing it into the profile channel using the included applicator. Ensure this is done from the interior side of the mosquito screen. Avoid overstretching, as this may cause bending and poor fit on the window frame.

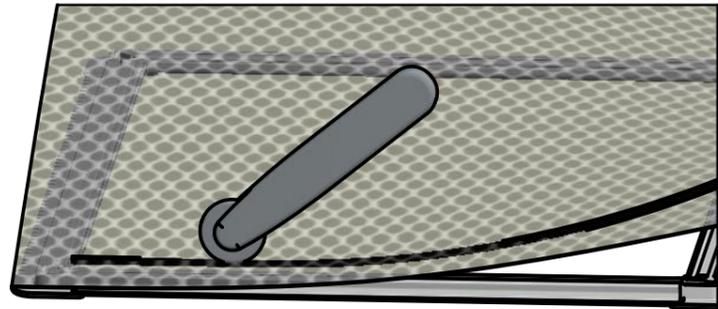


- 3 While securing the mesh, ensure that the frame remains straight by measuring the lengths of its diagonals (they should be the same length).

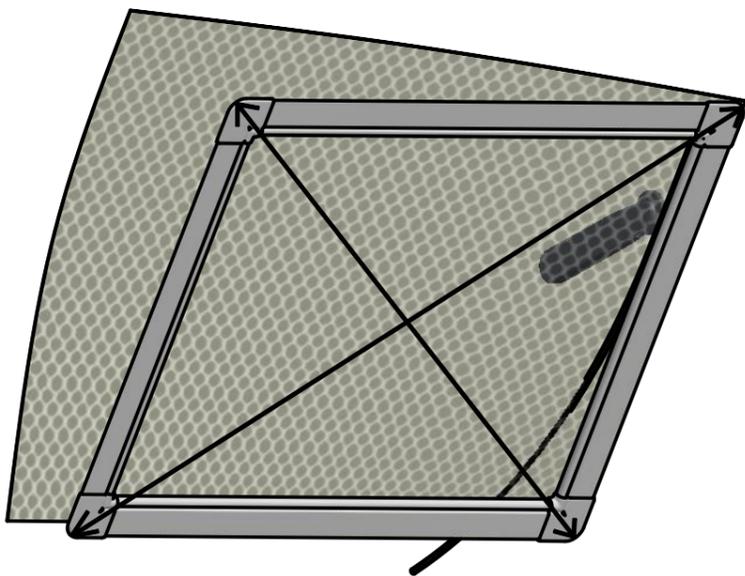

- 4 Trim any excess mesh.

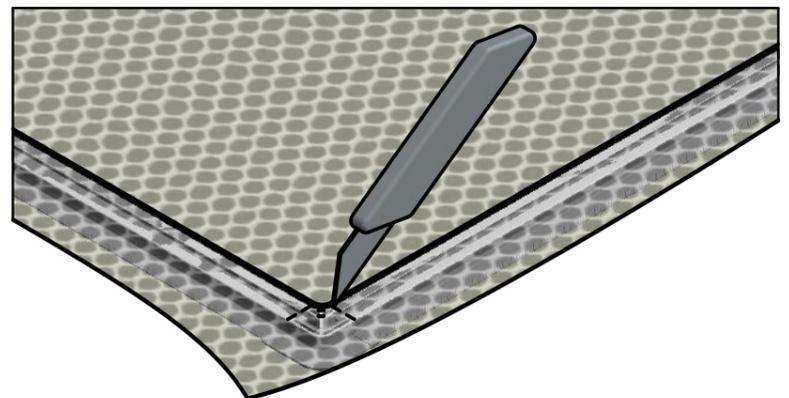

- 5 Insert the mounting clips into the profile channel, starting from the closest point to the corner. The clips should be installed at a distance of 10–15 cm from the corners, and each subsequent clip should be spaced 50 cm from the previous one.

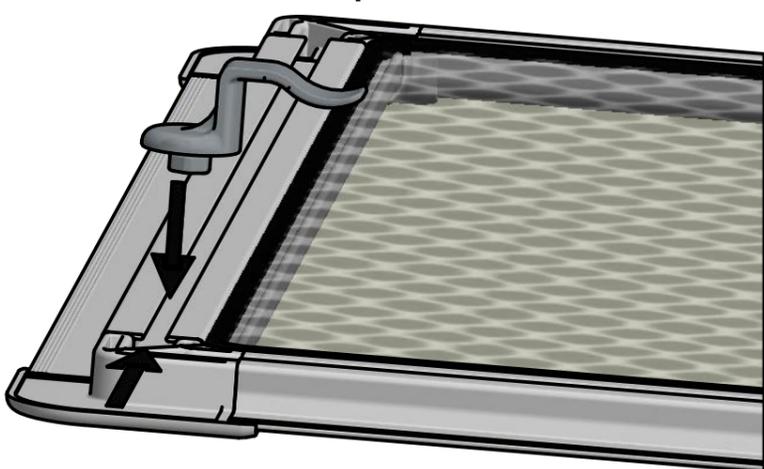

- 6 Example layout of the clips positioned on the assembled mosquito screen frame, ready for installation on the window frame.

