


Roller Blind MINI

measuring instructions

Long and trouble-free operation of the window shutter depends not only on the high quality of its workmanship, but also on its correct fit and assembly. In order for the blind to fit perfectly, the selected place must be properly and carefully dimensioned

The following auxiliary drawings must be strictly adhered to.

Free-hanging roller blind MINI

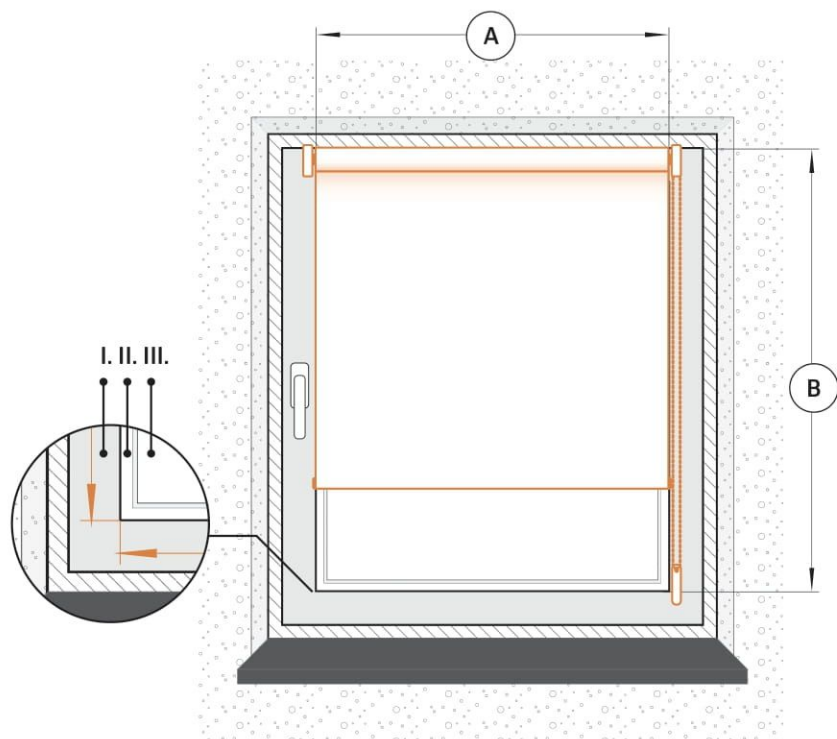

A - WIDTH

This is the width of the glass with glazing beads. We take the measurement at the point of joining the glazing bead with the window frame. **Width A is the width of the fabric**

B - HEIGHT

It is the height from the upper edge of the window frame to the place where the glazing bead is connected to the window frame

I - Window frame

II - Glazing bead

III - Glass

*We give all dimensions in millimeters